 
 


Parts List



Caster
x5



Base
x1




Gas Lift
x1



Seat
x1



Backrest
x1

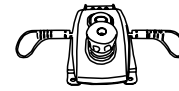

Mechanism
x1



Headrest (optional)
x1


Hardware



8*16mm Bolts | A
x4




8*16mm Bolts | A
x4

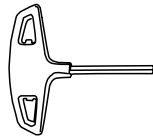


6mm Allen Wrench
x1


Disassembly Steps

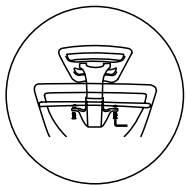

Detach the headrest from the aluminum alloy handle by unscrewing.

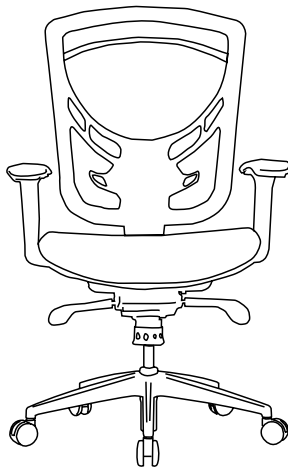


1. Grasp chair and pull upward to detach the gas lift from mechanism.

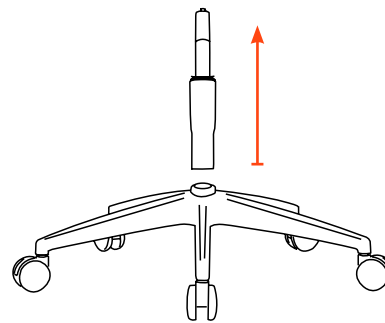


2. Remove gas lift from base by grasping the gas lift and pulling out from base.


Borgo Contract Seating

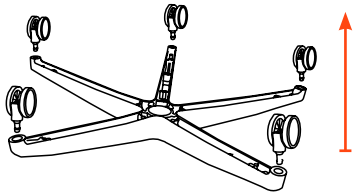


3. Grasp and pull to remove casters from base.

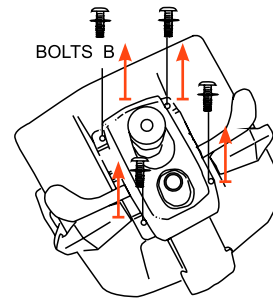

4. Remove Bolts B to detach seat and mechanism.

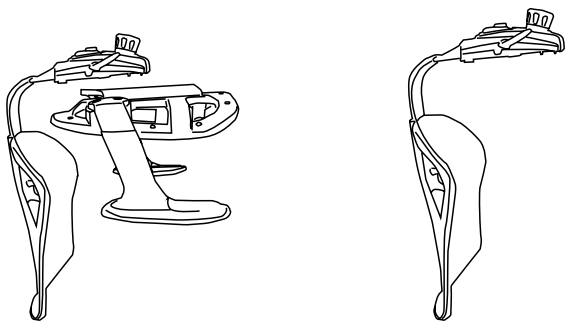

5. Back frame and seat mechanism will now detach.

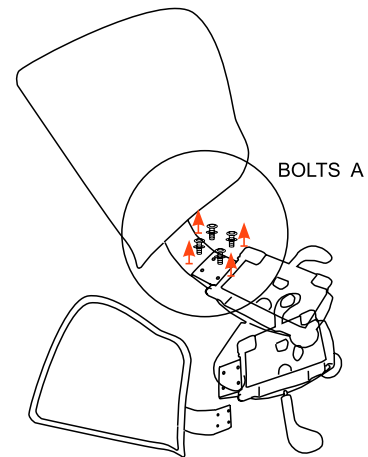

6. Remove Bolts A from mechanism and back frame.

Borgo Contract Seating